




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

Installation Guide

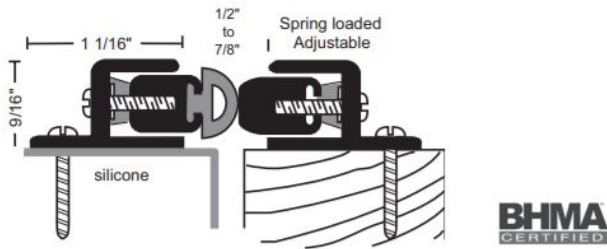

Install only on outside of outswinging door or inside of inswinging door.

Installation Instructions

1. Cut astragal to length. Cut from one end, not closer than 1" to the adjusting screw. If necessary to shorten more, cut other end.
2. Position seal on door as shown above.
3. Loosely secure the top screws, bottom screws, and center screws.
4. Once properly aligned, tighten these screws, and install remaining screws.
5. Adjust astragal so it does not impede proper closing and latching of the doors.

SKU: N140S

