



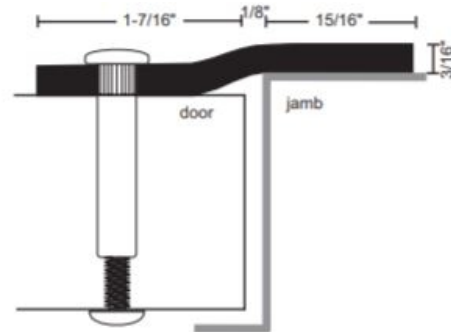

**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

Installation Guide

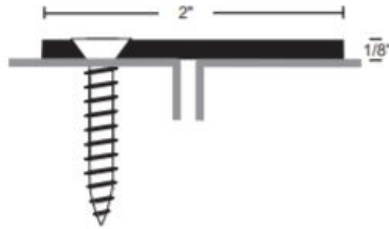

Installation Instructions

1. Cut astragal to fit.
2. Position on door face with astragal overlapping gap and other door a minimum of 3/4" (required by U.L. on fire-rated doors).
3. Mark screw holes.
4. Drill pilot holes for screws using a 11/64" drill bit (139SP) or 5/16": bit for SNB's (1392SP).
5. Install with #12x1-1/4" SMS or SNB (1392SP).
6. Adjust position so astragal does not impede proper closing and latching of door.

SKU: N1392SP



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com