




**TRADEMARK
HARDWARE**
WORLD OF QUALITY HARDWARE

Installation Guide

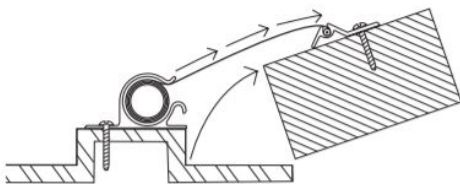

This product should be mounted before any panic bars or other surface mounted hardware.

Installation Instructions

1. Position bottom of Fingerguard flush with bottom of door.
2. Mount roller portion on door frame soffit flush with door stop edge closest to door.
3. Mount the fabric retainer to the surface of the door, with mounting holes approx. 2-3/4" from edge of the door.

NOTE: With door closed, the two (2) metal portions should be approximately 7/8" apart to prevent pinching fingers.

SKU: N2248



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com