




**TRADEMARK
HARDWARE**
WORLD OF QUALITY HARDWARE

Installation Guide

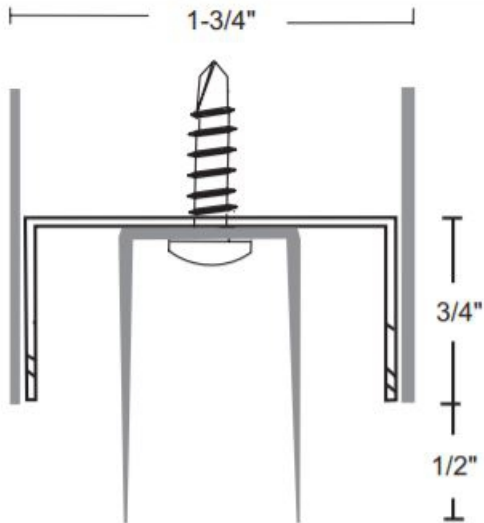

Installation Instructions

1. Measure and cut door shoe to fit.
2. Notch to fit around door seam if needed.
3. Position shoe in bottom channel of door as illustrated above.
4. Install with TEK screws provided.
5. Make sure gasketing does not impede proper closing and latching of door.

SKU: N331

