



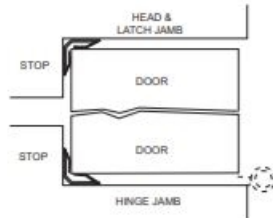

**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

Installation Guide



Made in USA



- * Seals against smoke, air, sound and weather.
- * Excellent compression; door latches easily.

Installation Instructions

1. The temperature of the frame must be above 50°F for the adhesive to bond.
2. Clean frame with clean wipe provided to remove dust, oil, grease and dirt. High gloss painted surfaces may require roughening with a scotch brite pad or sand paper so adhesive will bond properly.
3. Measure and pre-cut pieces to fit the head and jambs.
4. Remove both pieces of protective backing 1 to 2 feet at a time.
5. Position on frame where illustrated for clearance when compressed.
6. Adhere by pressing firmly (approx. 15 lbs pressure required) along entire length of gasket. Do not remove and relocate.
7. Make sure the seal does not impede the proper closing and latching of door.



POSITIVE PRESSURE TESTED GASKETING MATERIALS
FOR FIRE DOORS
FOR APPLICATION TO HOLLOW-METAL-TYPE FIRE DOORS
RATED UP TO 3 HOURS AND WOOD-TYPE FIRE DOORS
RATED UP TO 1-1/2 HOURS.
CATEGORY H

Smoke & Draft Control Gasketing (Category H) tested to UL
1784; meets requirements of NFPA 105, IBC for use on 'S'
label doors.

2.15

STORAGE AND SHELF LIFE

The adhesive on this seal has a shelf
life of one year stored at 75°F and 50%
relative humidity or less

SKU: N5020



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com