


## **Installation Guide**



Made in USA

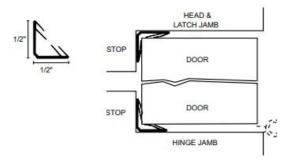

- \* Seals against smoke, air, sound and weather.
- \* Excellent compression; door latches easily.

## Installation Instructions

- 1. The surface temperature of the frame must be above 50°F for the adhesive to bond.
- 2. Clean frame with clean wipe provided to remove dust, oil, grease and dirt. Wax coated or high gloss painted surfaces may require roughening with a scotch brite pad or sand paper so adhesive will bond properly.
- Measure and pre-cut pieces to fit the head and jambs.
- 4. Remove protective backing 1 to 2 feet at a time.
- Position on frame where illustrated.
- Adhere seal by pressing firmly (15 lbs. of pressure required) along entire length of gasket. Do not remove and relocate.
- 7. Make sure the seal does not impede the proper closing and latching of door.



POSITIVE PRESSURE TESTED GASKETING MATERIALS FOR FIRE DOORS FOR APPLICATION TO HOLLOW-METAL-TYPE FIRE DOORS

OR APPLICATION TO HOLLOW-METAL-TYPE FIRE DOORS RATED UP TO 3 HOURS AND WOOD-TYPE FIRE DOORS RATED UP TO 1-1/2 HOURS. CATEGORY H

Smoke & Draft Control Gasketing (Category H) tested to UL 1784; meets requirements of NFPA 105, IBC for use on 'S' label doors.

2.15

## STORAGE AND SHELF LIFE

The adhesive on this seal has a shelf life of one year stored at 75°F and 50% relative humidity or less

**SKU: N5025** 







