




**TRADEMARK  
HARDWARE**

WORLD OF QUALITY HARDWARE

# Installation Guide

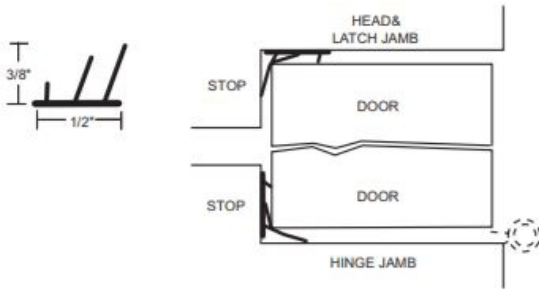

**Made in USA**



## Installation Instructions

1. The surface temperature of the frame must be above 50°F for the adhesive to bond.
2. Clean frame with clean wipe provided to remove dust, oil, grease and dirt. Wax coated or high gloss painted surfaces may require roughening with a scotch brite pad or sand paper so adhesive will bond properly.
3. Measure and pre-cut pieces to fit the head and jambs.
4. Remove protective backing 1 to 2 feet at a time.
5. Position on frame where illustrated.
6. Adhere seal by pressing firmly (15 lbs. of pressure required) along entire length of gasket. Do not remove and relocate.
7. Make sure the seal does not impede the proper closing and latching of door.



POSITIVE PRESSURE TESTED GASKETING MATERIALS  
FOR FIRE DOORS  
FOR APPLICATION TO HOLLOW-METAL-TYPE FIRE DOORS  
RATED UP TO 3 HOURS AND WOOD-TYPE FIRE DOORS  
RATED UP TO 1-1/2 HOURS.  
CATEGORY H  
73NN

Smoke & Draft Control Gasketing (Category H) tested to UL  
1784; meets requirements of NFPA 105, IBC for use on 'S'  
label doors.

### STORAGE AND SHELF LIFE

The adhesive on this seal has a shelf  
life of one year stored at 75°F and 50%  
relative humidity or less

## SKU: N5075



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com