




**TRADEMARK  
HARDWARE**

WORLD OF QUALITY HARDWARE

# Installation Guide

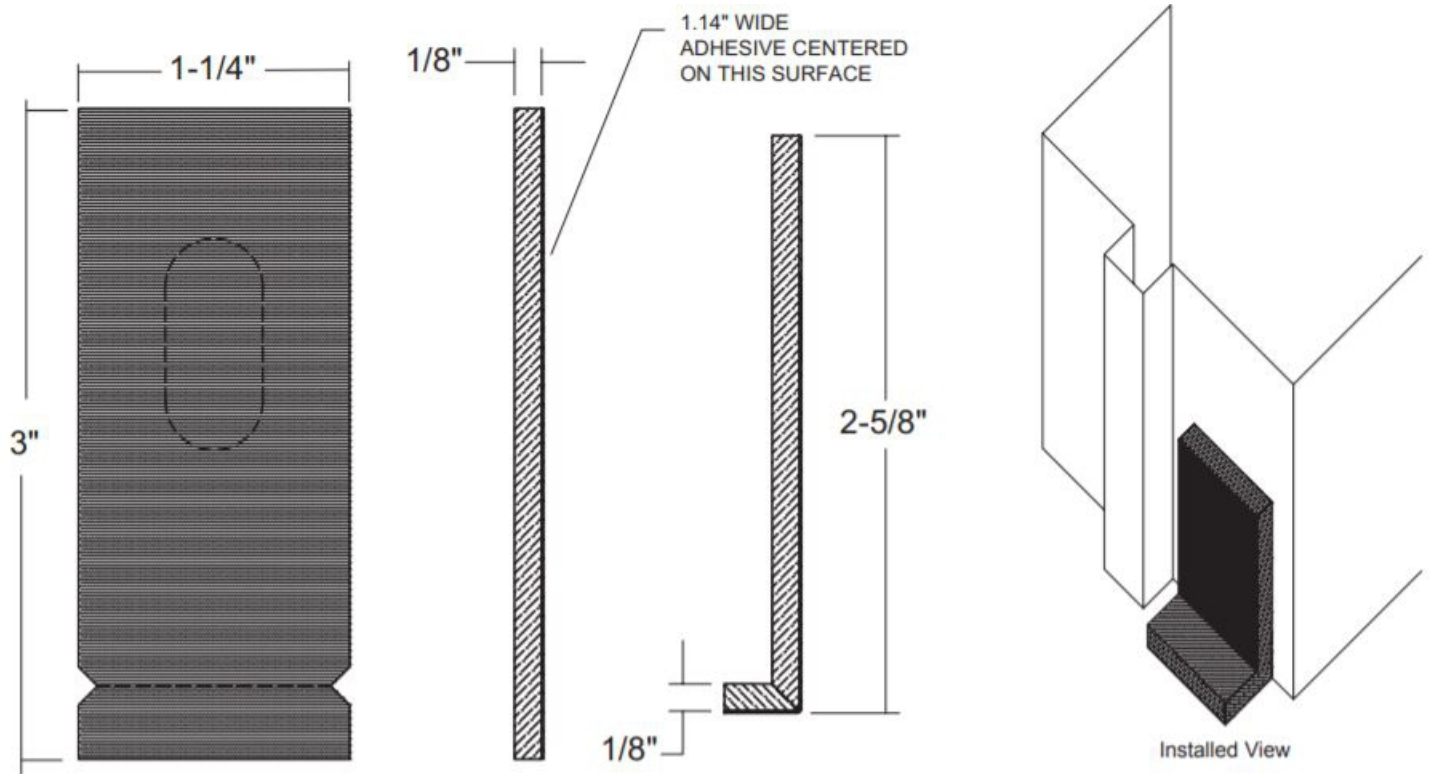

## Installation Instructions

1. Remove oval knockout to allow automatic door bottom actuator to contact jamb when required.
2. Remove backing from adhesive.
3. Position on threshold or floor and bottom of jambs as illustrated with centerline of pad opposite centerline of door.
4. Adhere by pressing firmly on seal.
5. Make sure the seal does not impede proper closing and latching of the doors.

## SKU: N60FP



[www.tmhardware.com](http://www.tmhardware.com)



845-388-1300



845-388-1388



[sales@tmhardware.com](mailto:sales@tmhardware.com)