




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

Installation Guide

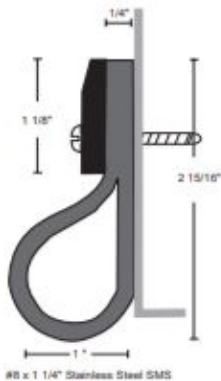

Installation Instructions

1. Peel release liner from adhesive tape, located on the neoprene.
2. Apply neoprene to metal retainer as illustrated above.
3. Cut seal to fit.
4. Drill through neoprene using 3/16" drill bit at screw hole locations.
5. Locate material at bottom of door.
6. Mark screw holes.
7. Drill pilot holes for screws using 7/64" drill bit.
8. Install material with screws provided, working from one end to the other.
9. Adjust position so seal does not impede proper closing and locking of overhead door.

SKU: N81369



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com