



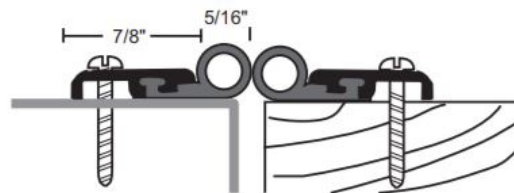

**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

Installation Guide

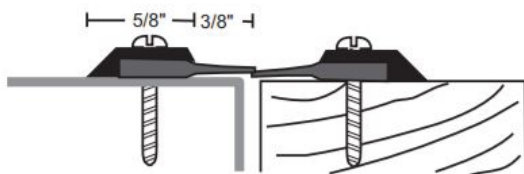

Installation Instructions

1. Cut astragal to length.
2. Position on doors as shown above.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" drill bit.
5. Install with screws provided.
6. Adjust astragal so it does not impede proper closing and latching of doors.

SKU: N9115



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com