



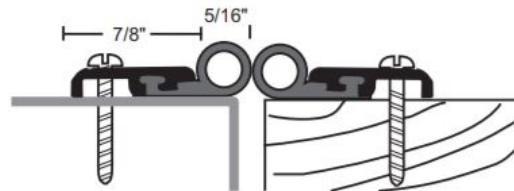

**TRADEMARK  
HARDWARE**

WORLD OF QUALITY HARDWARE

# Installation Guide

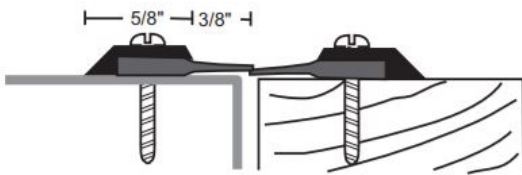

## Installation Instructions

1. Cut astragal to length.
2. Position on doors as shown above.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" drill bit.
5. Install with screws provided.
6. Adjust astragal so it does not impede proper closing and latching of doors.

**SKU: N9125**



[www.tmhardware.com](http://www.tmhardware.com)



845-388-1300



845-388-1388



[sales@tmhardware.com](mailto:sales@tmhardware.com)