


Installation Guide



Made in USA



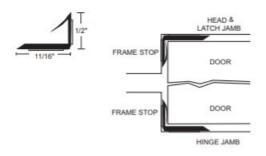



1/8" clearance required between door and frame.

UL Tested and Classified for Fire and Smoke Doors.

- * Seals against smoke, fire, air and weather.
- * Excellent compression; door latches easily.

Installation Instructions

- 1. The surface temperature of the frame must be above 50°F for adhesive to bond.
- Clean frame with clean wipe provided remove dust, oil, grease and dirt. Wax coated or high gloss painted surfaces may require roughening with a scotch brite pad or sandpaper so adhesive will bond properly.
- Measure and pre-cut pieces to fit head and jambs.
- 4. Remove protective backing 1 to 2 feet at a time.
- Position on frame where illustrated.
- Adhere by pressing firmly (approx 15 lbs. pressure required) straight down along entire length of gasketing. Do not remove and relocate.
- 7. Make sure the seal does not impede proper closing and latching of the door.



POSITIVE PRESSURE TESTED GASKETING MATERIALS FOR FIRE DOORS FOR APPLICATION TO HOLLOW-METAL-TYPE FIRE DOORS RATED UP TO 3 HOURS AND WOOD-TYPE FIRE DOORS RATED UP TO 1-1/2 HOURS, CATEGORY G, H

Smoke & Draft Control Gasketing (Category H) tested to UL 1784; meets requirements of NFPA 105, IBC for use on 'S' label doors.



NGP-EDGE, Sealing System (Category G) for use on category B wood type fire doors rated up to 90 minutes, single swing up to 40" x 90" and pairs up to 8'0" x 9'0".

STORAGE AND SHELF LIFE

The adhesive on this seal has a shelf life of one year stored at 75°F and 50% relative humidity or less

SKU: N9450







