




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

Installation Guide

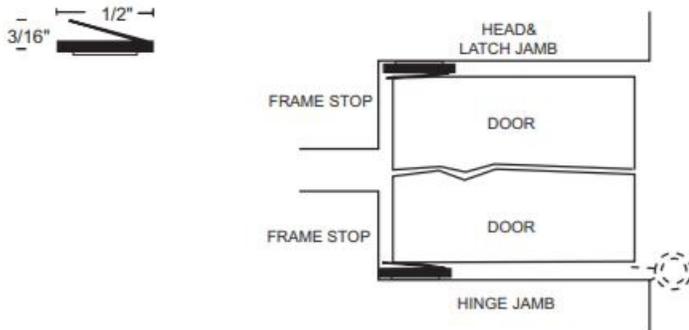

Made in USA



UL Tested and Classified for Fire and Smoke Doors.

- * Seals against smoke, fire, air and weather.
- * Excellent compression; door latches easily.

INSTALLATION INSTRUCTIONS

1. The surface temperature of the frame must be above 50°F for the adhesive to bond properly.
2. Clean frame with clean wipe provided to remove dust, oil, grease and dirt. Wax coated or high gloss painted surfaces may require roughening of the surface with a scotch brite pad or sandpaper so adhesive will properly bond.
3. Measure and pre-cut pieces to fit where seal is to mount. 1/8" clearance required between door and frame.
4. Remove protective backing 1 to 2 feet at a time.
5. Position on frame where illustrated.
6. Adhere by pressing firmly (approx. 15 lbs. pressure required) straight down along entire length of gasketing. Do not remove and relocate.
7. Make sure the seal does not impede proper closing and latching of the door.

SKU: N9850



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com