




**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

Installation Guide

Installation Instructions

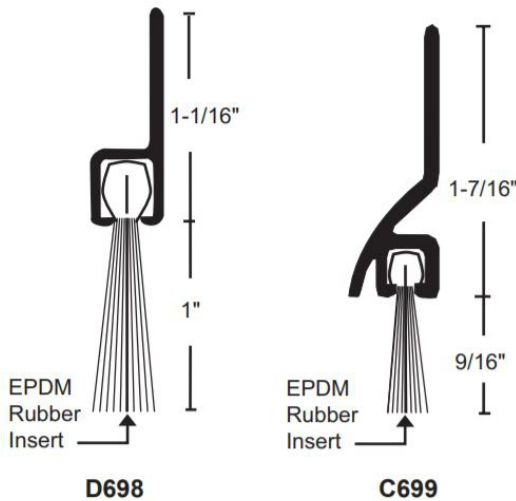

1. Remove brush from metal retainer.
2. Cut brush to fit opening, using the cutting section of pliers or diagonal cutters. If bristles are not secure, crimp the end of the metal or use a drop of adhesive to secure the brush.
3. Cut the metal retainer to length.
4. Replace brush in metal retainer.
5. With door closed, position seal mark screw holes.
6. Drill pilot holes for screws with a 7/64" bit.
7. Install with screws provided.
8. Slightly peen the ends of each retainer to secure the brush from moving.
9. Adjust position so sweep does not impede proper closing and latching of door.

SKU: ND698



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com